



**PELTOR<sup>®</sup>**

Dect-Com

# USER GUIDE

## – Dect-Com Handset

### **1.1 POWER ON:**

Press VOL+ and VOL– at the same time until LED is switched on. If the handset is registered on a base, the handset automatically connects to the conference with the other handsets, and LED starts to flash after approx. 10 seconds.

### **1.2 POWER OFF:**

Press VOL+ and VOL– at the same time for at least 5 seconds. LED is switched off to indicate that the handset is off.

### **1.3 VOLUME UP:**

Press VOL+ (5 levels) to increase the volume. When the maximum level is reached, you will hear a short tone in the headset.

### **1.4 VOLUME DOWN:**

Press VOL– (5 levels) briefly to decrease the volume. When the minimum level is reached, you will hear a short tone in the headset.

## **1.5 ADJUST THE HANDSET TO COPE WITH INCREASING BACKGROUND NOISE:**

If the background noise causes the microphone to be open continuously, press VOX+ (5 levels) until the microphone is voice operated.

## **1.6 ADJUST THE HANDSET TO SUIT A DECREASING LEVEL OF BACKGROUND NOISE:**

If you have to speak loud to open the microphone, press VOX– (5 levels) until the microphone is voice operated.

## **1.7 MICROPHONE OPEN CONTINUOUSLY:**

Press VOX+ and VOX– briefly at the same time and the signal from the microphone will be open continuously. You will hear a long steady tone in the headset.

## **1.8 MICROPHONE VOX OPERATED:**

Press VOX+ or VOX– briefly and the microphone will be VOX operated.

## **1.9 REGISTRATION ON DECT-COM BASE UNIT:**

Press the button on the Base Unit until the green LED starts to flash. The base is now in “registration mode”.

Press the CONNECT button on the handset for at

least 5 seconds. The LED on the handset starts flashing and you will hear a long steady tone in the headset. The registration can take up to a minute. When the handset is registered on the DECT base, the green LED on the Base Unit will light continuously and the LED on the handset will give one short flash every 3 seconds. The handset is now connected to the conference and ready for use.

## **2.0 DISCONNECT FROM CONFERENCE:**

Press the CONNECT button briefly to disconnect the handset from the conference with the other handsets. The LED starts flashing (two short flashes every 3 seconds).

## **2.1 CONNECTION TO CONFERENCE:**

Press the CONNECT button briefly to connect the handset to the conference with the other handsets. The LED starts flashing (one short flash every 3 seconds).

## **2.2 HIGH-LEVEL SOUND IN THE HEADSET:**

Press VOL+ and VOX+ at the same time for at least 5 seconds, and a high-level sound function is activated in the headset. You will hear a short tone in the headset. This function is useful if the background noise is very high.



## **WARNING:**

Excessive levels of sound can be detrimental to your hearing.

## **2.3 NORMAL SOUND IN THE HEADSET:**

Press VOL+ and VOX+ at the same time for at least 5 seconds, and the sound level will revert to the normal level. You will hear a short tone in the headset.

## **2.4 ADAPTATION FOR USE WITH AN ELECTRIC MICROPHONE:**

Press VOL- and VOX- at the same time for at least 5 seconds, and the handset can be used with an electric microphone (the microphone uses DC voltage from the headset). You will hear a short tone in the headset.

## **2.5 ADAPTATION FOR USE WITH A DYNAMIC MICROPHONE:**

Press VOL- and VOX- at the same time for at least 5 seconds and the handset reverts to dynamic microphone mode. You will hear a short tone in the headset.

## **2.6 BATTERY CHARGER:**

When the handset is connected to the battery

charger the LED starts to flash slowly as long as the charging process is active. When the battery is fully charged the LED switches off.

## **2.7 HANDSET OUTSIDE THE AREA COVERED BY THE DECT BASE UNIT:**

If the handset moves outside the area covered by the DECT BASE UNIT or loses contact with the base unit, the LED on the handset lights constantly.

When you return to area covered, you will be out of conference and LED is flashing (2 short flash every 3 seconds). Connection to conference see point 2.1

## **2.8 WARRANTY**

The warranty

- covers any defects in the appliance resulting from faults in material and/or workmanship
- do not cover damages due to normal wear or tear, improper use or maintenance
- period is 24 months calculated from the end-users date of invoice

Warranty claims is to be sent to the address below together with proof of purchase/receipt and a description of the fault.

Linnemann A/S  
Landlystvej 1, Erritsö  
DK-7000 FREDERICIA  
Denmark